

LISTEN.
THINK.
SOLVE.®

INTEGRATED PRODUCTION & PERFORMANCE SUITE



Asset Management

FactoryTalk® AssetCentre



INSTALLATION GUIDE

PUBLICATION FTAC-IN002D-EN-E–November 2008

Supersedes Publication FTAC-IN002C-EN-E



Allen-Bradley • Rockwell Software

**Rockwell
Automation**

Contact Rockwell Customer Support Telephone — 1.440.646.3434
Online Support — <http://www.rockwellautomation.com/support/>

Copyright Notice © 2008 Rockwell Automation Technologies, Inc. All rights reserved. Printed in USA.

This document and any accompanying Rockwell Software products are copyrighted by Rockwell Automation Technologies, Inc. Any reproduction and/or distribution without prior written consent from Rockwell Automation Technologies, Inc. is strictly prohibited. Please refer to the license agreement for details.

Trademark Notices Allen-Bradley, ControlLogix, eProcedure, FactoryTalk, Rockwell Automation, Rockwell Software, RSLinx, RSView, and the Rockwell Software logo are registered trademarks of Rockwell Automation, Inc.

The following logos and products are trademarks of Rockwell Automation, Inc.:

RSBizWare, the RSBizWare logo, RSBizWare Batch, FactoryTalk Batch, RSBizWare BatchCampaign, RSBizWare BatchHistorian, FactoryTalk Historian Classic for Batch, RSBizWare Historian, FactoryTalk Historian Classic, RSBizWare MaterialTrack, and RSLoop Optimizer.

Any Rockwell software or hardware not mentioned here are also trademarks, registered or otherwise, of Rockwell Automation Technologies, Inc.

Other Trademarks ActiveX, Microsoft, Microsoft Access, SQL Server, Visual Basic, Visual C++, Visual SourceSafe, Windows, Windows ME, Windows NT, Windows 2000, Windows Server 2003, and Windows XP are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe, Acrobat, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

ControlNet is a registered trademark of ControlNet International.

DeviceNet is a trademark of the Open DeviceNet Vendor Association, Inc. (ODVA).

Ethernet is a registered trademark of Digital Equipment Corporation, Intel, and Xerox Corporation.

OLE for Process Control (OPC) is a registered trademark of the OPC Foundation.

Oracle, SQL*Net, and SQL*Plus are registered trademarks of Oracle Corporation.

All other trademarks are the property of their respective holders and are hereby acknowledged.

Warranty This product is warranted in accordance with the product license. The product's performance may be affected by system configuration, the application being performed, operator control, maintenance, and other related factors. Rockwell Automation is not responsible for these intervening factors. The instructions in this document do not cover all the details or variations in the equipment, procedure, or process described, nor do they provide directions for meeting every possible contingency during installation, operation, or maintenance. This product's implementation may vary among users.

This document is current as of the time of release of the product; however, the accompanying software may have changed since the release. Rockwell Automation, Inc. reserves the right to change any information contained in this document or the software at any time without prior notice. It is your responsibility to obtain the most current information available from Rockwell when installing or using this product.

Contents

1 • Introduction	1
FactoryTalk Services Platform	1
Upgrading FactoryTalk AssetCentre.....	1
Optional upgrades with CPR 9 SR 1	2
Location of upgrade setup files	2
About the documentation set (or, Where do I start?).....	3
About this book	3
The components of FactoryTalk AssetCentre.....	3
System requirements	5
Server computer requirements.....	5
Client and agent computer requirements	6
Network requirements	7
About the installation process	8
2 • Converting an RSMACC system.....	11
About migrating the databases	11
Migrating from RSMACC Change Management to FactoryTalk AssetCentre	12
3 • Upgrading FactoryTalk AssetCentre from v. 2.00 (CPR 7) to v. 2.31 (CPR 9 SR 1).....	15
Upgrading to CPR 9 SR 1	15
4 • Installing the FactoryTalk AssetCentre server.....	17
Installing Internet Information Services	19
Installing Microsoft SQL Server 2005	20
Installing Microsoft SQL Server 2005 Service Packs	23
Minimum Microsoft SQL Server 2005 Permissions	24
Installing FactoryTalk Activation	24
Installing the FactoryTalk Activation server and activating the software.....	25
Installing the FactoryTalk Activation client and activating the software.....	27
Installing ProCalV5 server software	28

Installing FactoryTalk AssetCentre server software	29
Installing FactoryTalk Services Platform	31
FactoryTalk AssetCentre server installer	32
FactoryTalk AssetCentre Client Package installer	35
FactoryTalk AssetCentre Common Components installer	35
FactoryTalk AssetCentre Calibration Management Server installer	36
FactoryTalk AssetCentre Process Device Configuration Server installer	37
Using the Windows Firewall Configuration Utility	37
Installing the ProCalV5 server software after the FactoryTalk AssetCentre server	38
Running the ProCalV5 Data Source Edit Wizard	38
5 • Installing FactoryTalk AssetCentre clients.....	41
Where to install the FactoryTalk AssetCentre client	41
Optional upgrades with CPR 9 SR 1	41
Installing FactoryTalk AssetCentre clients	42
Installing FactoryTalk Services Platform	45
FactoryTalk AssetCentre Common Components installer	46
FactoryTalk AssetCentre Calibration Management client software installer.....	46
FactoryTalk AssetCentre Process Device Configuration client software installer.....	47
Installing RSLinx Classic Lite.....	47
Installing RSLinx Enterprise	48
Using the Windows Firewall Configuration Utility	49
Checking to see if the client is installed correctly.....	50
Installing the ProCalV5 client software	50
Installing DTMs	51
6 • Installing FactoryTalk AssetCentre agents	53
Where to install FactoryTalk AssetCentre agents.....	53
Optional upgrades with CPR 9 SR 1	54
Installing the FactoryTalk AssetCentre Disaster Recovery agent	54
Installing FactoryTalk Services Platform	56
Installing RSLinx Classic Lite.....	58
FactoryTalk AssetCentre Common Components installer	59
FactoryTalk AssetCentre Disaster Recovery agent installer	59
FactoryTalk AssetCentre Agent Host installer.....	59
RSLogix 5000 Compare installer	59
Installing RSLinx Enterprise	60
Using the Windows Firewall Configuration Utility	61

Configuring for security-enabled RSLogix programming software	62
If operating in a Windows domain	62
If operating in a Windows workgroup.....	63
Checking to see if the agent software is current	64
7 • Configuring FactoryTalk AssetCentre	67
Configuring for client access to the server.....	67
Adding users to the FactoryTalk Directory	67
Adding computers to the FactoryTalk Directory.....	68
Configuring feature security for FactoryTalk AssetCentre users	69
8 • Troubleshooting FactoryTalk AssetCentre installation	73
General installation	73
A red x appears next to an item to be installed.....	73
A “Program Maintenance” window appears while installing	73
Server installation.....	73
SQL collation error encountered during database installation	73
Unable to log on to SQL Server during server installation	74
Client and agent installation.....	74
Web page for installing the FactoryTalk AssetCentre client and agent cannot be displayed	74
“Error reading Primary Server Name from FactoryTalk Directory” during client installation.....	75
Starting the client	76
“Error initializing FactoryTalk AssetCentre” appears when attempting to start the client	76
“The client and server versions are incompatible”	76
“Cannot initialize application eventing subsystem” or “No connection could be made because the target machine actively refused it” appears when starting the client	76
“At least one service or driver failed during system startup. Use Event Viewer to examine the event log for details” appears when attempting to start the client.....	77
“Error initializing FactoryTalk AssetCentre. Could not load file or assembly... CalibrationPlugin.dll” appears when attempting to start the client.....	77
Other errors starting the client.....	77
Starting the agent	78

Using Calibration Management	78
“No ProCalV5 Server connection information exists on the FactoryTalk AssetCentre server” appears when attempting to use Calibration Management features	78
“Error executing ProCalV5 commands, check ProCalV5 installation” appears when attempting to use Calibration Management features	78
“Error initializing FactoryTalk AssetCentre. Could not load file or assembly... CalibrationPlugin.dll” appears when attempting to start the client.....	79
Unable to run the ProCalV5 Data Source Edit Wizard	79
A • Installing Microsoft SQL Server 2000.....	81
Installing Microsoft SQL Server 2000.....	81
Installing Microsoft SQL Server 2000 Service Pack 4.....	83
B • Reference.....	85
Additional ports you may have to open	85
Index.....	89

5

Installing FactoryTalk AssetCentre clients

Once you have installed your FactoryTalk AssetCentre server, you can install FactoryTalk AssetCentre clients.

If installing on the Windows 2000 operating system: At certain points of the installation you will need to restore a window that has been minimized. Sometimes on Windows 2000 the taskbar is not visible after a reboot, and therefore the taskbar button for the installation window that needs to be restored is also not visible. If this happens, use Alt-tab to restore the window.

Where to install the FactoryTalk AssetCentre client

Install the client on any computer:

- from which you want to access the FactoryTalk AssetCentre client software (to edit the representation of your assets, to view logs, to create schedules, to search the logs, and so on).
- that is capable of running the client software (see “Client and agent computer requirements” on page 6).
- that is connected to the FactoryTalk AssetCentre server.

To take advantage of security and auditing, the FactoryTalk AssetCentre client (or agent) should be installed on each computer running your RSLogix programming software.

The Disaster Recovery capability provides the ability to schedule a comparison between master files and processor program and data files. To edit the file and data settings for a compare operation for PLC-5, SLC 500, or MicroLogix processors, you must have RSLogix 5 or RSLogix 500 software installed on the client computer.

If you have purchased the Calibration Management capability for FactoryTalk AssetCentre, you must also install the ProCalV5 client software on the FactoryTalk AssetCentre client computer. This step comes after you have installed the FactoryTalk AssetCentre client software. See page 50.

Optional upgrades with CPR 9 SR 1

FactoryTalk AssetCentre provides optional upgrades from CPR 9 to CPR 9 SR 1 for these software products used by FactoryTalk AssetCentre client:

- FactoryTalk Services Platform
- RSLinx Classic Lite
- RSLinx Enterprise

If you already have these products installed, you do not need to reinstall them. If you do not have these products installed, FactoryTalk AssetCentre will install the CPR 9 SR 1 version.

If you already have the CPR 9 version installed and you wish to upgrade to the CPR 9 SR 1 version, you must manually upgrade it from the FactoryTalk AssetCentre installation disc, as described on page 2. We recommend that you perform the upgrade before you begin installing the FactoryTalk AssetCentre client.



If you want to use the CPR 9 SR 1 version of RSLinx Enterprise, you must also use the CPR 9 SR 1 version of FactoryTalk Services Platform.

If you already have version 2.21 or 2.21.01 of FactoryTalk AssetCentre client installed, you will be given the option to upgrade to version 2.31 during the installation process.

Installing FactoryTalk AssetCentre clients

The FactoryTalk AssetCentre client provides the user interface for FactoryTalk AssetCentre. It is through the client that you perform tasks such as checking files in and out, creating and running scheduled events, managing and configuring DTMs (if you have the Process Device Configuration capability), and viewing logs. For more information on what you can do with FactoryTalk AssetCentre client software, see the online help (once the client is installed).

Install the FactoryTalk AssetCentre client software on all computers on which you want to use FactoryTalk AssetCentre. The client is not required on the FactoryTalk AssetCentre server computer, but you can install it on the server if desired.

To install a FactoryTalk AssetCentre client:

1. Log on to the client computer as an administrator or as a user with administrative privileges.

For example, in Windows Vista you can log on with a Limited User Account (LUA), but before installing you will be asked to supply administrative credentials.

2. On the client computer, open Internet Explorer.
3. In the **Address** field of Internet Explorer, or in the field with the Internet Explorer icon (Windows Vista only), type the following address:

http://servername/rockwellsoftware/assetcentre

where *servername* is the name of your FactoryTalk AssetCentre server computer.

For example, if your FactoryTalk AssetCentre server is called MYSERVER, type:

http://MYSERVER/rockwellsoftware/assetcentre



If you are using SSL, then begin with https:// instead.

4. Press **Enter**.
5. Internet Explorer displays a page from the server that allows you to install the FactoryTalk AssetCentre client software.
6. Click **Install AssetCentre Client on this computer**.



If Internet Explorer displays an error message that it can't connect to the install web page, try bypassing the proxy for local addresses. Also make sure that IIS is running on the server. For information on running IIS see "Web page for installing the FactoryTalk AssetCentre client and agent cannot be displayed" on page 74.

If Internet Explorer displays a warning about possible unsafe content, try adding the FactoryTalk AssetCentre Web site (URL above) to your Trusted Sites.

See your Internet Explorer documentation for more information.

7. On the File Download - Security Warning window, click **Run** (or **Open**). Do not attempt to save the installation file—it will **not** run correctly from your local computer.
8. The Install FactoryTalk AssetCentre Client window opens. The installer searches the computer for required components and displays the results in this window. The installer will not attempt to install components that already exist on the computer. Components that will be installed are indicated with a computer icon and a checked box. You cannot select or clear the check boxes in this window.



If you see a red "X" next to one or more components, this means that the installer cannot determine whether the component should be installed. Contact Technical Support using the contact information provided on the copyright page at the beginning of this guide.

9. Click **Start**. Follow the on-screen instructions for the components that need to be installed. The following sections provide more information about installing these components.



The installation of some components may require you to restart your computer. If this is the case and the setup program has not finished installing all of the necessary components, the setup program will restart the next time you log on to your computer.

The following components are checked for and installed or configured during the client installation:

- **Windows Installer 3.1 v2.** If this component is not already installed on your computer, the setup program will install it. Follow the on-screen installation instructions. If you are prompted to reboot when the installation is complete, close Microsoft Internet Explorer and any FactoryTalk AssetCentre installation windows before rebooting.

- **Microsoft .NET Framework.** The FactoryTalk AssetCentre client requires that Microsoft .NET Framework versions 1.1 (with Service Pack 1) and 2.0 be installed on your computer. If these components are not already installed on your computer, the setup program will install them. Follow the installation instructions on-screen to install them.

If a message appears asking to reboot the computer, select **No** and then click **Start** on the Install FactoryTalk AssetCentre Client window.

- **FactoryTalk Services Platform 2.10.00 or 2.10.01 (CPR9 or CPR9 SR1).** See “Installing FactoryTalk Services Platform,” next.
- **Check and Configure FTSP.** This occurs during the FactoryTalk Services Platform installation. See the substeps on page 45.
- **FactoryTalk AssetCentre Common Components.** See “FactoryTalk AssetCentre Common Components installer” on page 46.
- **FactoryTalk AssetCentre Client host.**
- **FactoryTalk AssetCentre Calibration Management Client.** See “FactoryTalk AssetCentre Calibration Management client software installer” on page 46.
- **FactoryTalk AssetCentre Process Device Configuration Client.** See “FactoryTalk AssetCentre Process Device Configuration client software installer” on page 47.
- **RSLinx Classic Lite 2.53.00 (CPR9) or 2.54.00 (CPR9 SR1).** See “Installing RSLinx Classic Lite” on page 47.
- **RSLinx Enterprise 5.00.00 (CPR9) or 5.17.00 (CPR9 SR1).** See “Installing RSLinx Enterprise” on page 48.
- **Launch Rockwell Windows Firewall Configuration Utility.** See “Using the Windows Firewall Configuration Utility” on page 49.

If you are installing the client on the FactoryTalk AssetCentre server computer, the server computer will already have Windows Installer, Microsoft .NET Framework, FactoryTalk Services Platform, and FactoryTalk AssetCentre Common Components installed. The installation program automatically skips the existing components. Skip those sections in the instructions that follow.

If installing on the server:
Skip to step 4. The FactoryTalk Services Platform has already been installed, but the FactoryTalk Directory must be specified.

Installing FactoryTalk Services Platform

See “Installing FactoryTalk AssetCentre clients” on page 42 for the steps to get to this part of the installation.

FactoryTalk AssetCentre depends on the Rockwell Software FactoryTalk Services Platform to function. If the platform is not installed on your computer (or if the correct version is not installed), the setup program will install it. If you have a previous version of the platform installed, you may need to uninstall it before continuing (the setup program will inform you if this is the case).



By default, all members of the Administrators group on the computer on which you are installing the FactoryTalk Services Platform are added to the Administrators group in the FactoryTalk Directory.

1. Follow the on-screen installation instructions to install the platform. If FactoryTalk Services Platform 2.10.00 or 2.10.01 is already installed on your computer, go to step 4.
2. When you are asked whether you want to install the FactoryTalk Administration Console, be sure the check box is selected (you will need the console to help you configure the FactoryTalk Directory). Continue to follow the on-screen instructions.
3. Click **Finish** on the InstallShield Wizard for the FactoryTalk Services Platform.



Respond to the FactoryTalk Directory Server Configuration window, explained in step 4, with care. Correctly identifying the FactoryTalk Directory is essential to a properly functioning system.

4. After the system checks the FactoryTalk Services Platform configuration, you will see a window with a stop sign on it. The purpose of this window is to set the location of the FactoryTalk Directory. If the computer on which you are installing the software is also the computer that will be the FactoryTalk Directory server, click **Continue** and go on to step 5. If the FactoryTalk Directory server is on a different computer, click **Select FactoryTalk Directory Server** and continue with the instructions below.
 - a. The utility may ask you to log on to FactoryTalk. Log on with your Windows administrator username and password. (As mentioned earlier, members of the Windows Administrators user group were automatically added to the FactoryTalk Directory.)
 - b. In the FactoryTalk Directory Server Location Utility window, click the browse button next to the **Computer hosting directory server** field.

- c. In the next window, select **Remote computer**. Type the name of your FactoryTalk Directory Server in the field, or click the browse button next to the field to browse for the server.
 - d. Once you have the name of the FactoryTalk Directory Server in the field, click **OK**, and then click **OK** again.
 - e. Click **OK** on the message telling you to restart the computer. The software attempts a connection to the FactoryTalk Directory Server. You may be asked to log on to the new FactoryTalk Directory server. If you are, enter the username and password for the Network Directory server administrator on the FactoryTalk Directory Server (not the local FactoryTalk Network Directory), and then click **OK**.
5. When you see a checklist window showing that the FactoryTalk Services Platform components were all installed and configured, click **Continue**. This will proceed to the next segment of the FactoryTalk AssetCentre client installation.
 6. Continue to follow the on-screen instructions.

If installing on the server:

Skip to the next section. The common components have already been installed.

FactoryTalk AssetCentre Common Components installer

See "Installing FactoryTalk AssetCentre clients" on page 42 for the steps to get to this part of the installation.

To install the common components:

1. Follow the on-screen instructions.
2. If you see messages indicating that the firewall has blocked a program, select **Unblock** on each message.

FactoryTalk AssetCentre Calibration Management client software installer

See "Installing FactoryTalk AssetCentre clients" on page 42 for the steps to get to this part of the installation.



The FactoryTalk AssetCentre Calibration Management client must be installed in the same folder as the FactoryTalk AssetCentre client.

After the FactoryTalk AssetCentre client is installed, the FactoryTalk AssetCentre Calibration Management client install begins.

1. On the Install FactoryTalk AssetCentre Calibration Management Client window, click **Next**.



2. Follow the on-screen instructions to install the FactoryTalk AssetCentre Calibration Management client.

When finished, there may be a short delay before you see the FactoryTalk AssetCentre Process Device Configuration client installer start.

FactoryTalk AssetCentre Process Device Configuration client software installer

See “Installing FactoryTalk AssetCentre clients” on page 42 for the steps to get to this part of the installation.



The FactoryTalk AssetCentre Process Device Configuration client must be installed in the same folder as the FactoryTalk AssetCentre client.

After the FactoryTalk AssetCentre Calibration Management client is installed, the FactoryTalk AssetCentre Process Device Configuration client install begins.

1. On the Install FactoryTalk AssetCentre Process Device Configuration Client window, click **Next**.
2. Follow the on-screen instructions to install the FactoryTalk AssetCentre Process Device Configuration client.

When finished, there may be a short delay before you see the RSLinx Classic Lite installer start.

Installing RSLinx Classic Lite

See “Installing FactoryTalk AssetCentre clients” on page 42 for the steps to get to this part of the installation.

RSLinx Classic allows you to connect to Rockwell Automation control hardware. If RSLinx Classic is not installed on the client computer, the installation program for the FactoryTalk AssetCentre client will install RSLinx Classic Lite. RSLinx Classic is required even if you have RSLinx Enterprise.

The version of RSLinx Classic installed is RSLinx Classic Lite, which is a version that does not support connections through OPC. For more information about RSLinx Classic, see the RSLinx Classic documentation.

If you have RSLinx Classic (version 2.53 or higher) installed on your computer, you do not need to install this component (and the FactoryTalk AssetCentre client installation program will not ask you to install it).

To install RSLinx Classic Lite:

1. Follow the on-screen instructions until you get to the Standard Setup page of the installation wizard.
2. The Standard Setup page allows you to select the components of the software you want to install and to change the folder where the software is installed. We advise that you install all of the components. Change the settings on this page as desired, and then click **Next**.
3. Continue following the on-screen instructions to complete the installation.
4. On the InstallShield Wizard Completed window, click **Finish**.
5. Click **Exit** on the RSLinx Classic installation menu.
6. Click **Continue** on the Install FactoryTalk AssetCentre Client window.

When finished, there may be a short delay before you see the RSLinx Enterprise installer start.

Installing RSLinx Enterprise

See "Installing FactoryTalk AssetCentre clients" on page 42 for the steps to get to this part of the installation.

RSLinx Enterprise is required for your FactoryTalk AssetCentre system to communicate with PanelView Plus operator interfaces. RSLinx Classic Lite is still required for the FactoryTalk AssetCentre client even if you install RSLinx Enterprise.

If you have RSLinx Enterprise (version 5.00.00 or higher) installed on your computer, you do not need to install this component (and the FactoryTalk AssetCentre client installation program will not ask you to install it).

1. Follow the on-screen instructions.
2. When prompted for a serial number, enter any 10-digit number, for example 1234567890.
3. In the Setup Type page of the installation wizard, select Standard Feature Set Installation, and then click **Next**.
4. Continue following the on-screen instructions to complete the installation.
5. On the InstallShield Wizard Completed window, click **Finish**.
6. Click **Exit** on the RSLinx Enterprise installation menu.
7. Click **Continue** on the Install FactoryTalk AssetCentre Client window.



Using the Windows Firewall Configuration Utility

See “Installing FactoryTalk AssetCentre clients” on page 42 for the steps to get to this part of the installation.

IF YOUR OPERATING SYSTEM IS WINDOWS VISTA, WINDOWS XP SP 2 OR HIGHER, OR WINDOWS SERVER 2003 SP 1 OR HIGHER

These operating systems support Windows Firewall. (Windows Vista is supported for FactoryTalk AssetCentre clients only.) The Windows Firewall Configuration Utility will run whether you are using the firewall or not.

- If your Windows Firewall/Internet Connection Sharing (ICS) service is stopped or is disabled, the FactoryTalk AssetCentre Windows Firewall Configuration window will indicate this with a red x. Click **Continue**. The FactoryTalk AssetCentre server installation is complete.

If you are using a firewall other than Windows Firewall, use the information in “Network requirements” on page 7 and “Additional ports you may have to open” on page 85 to configure your firewall to allow communication through the appropriate ports and with specific processes.

- If your Windows Firewall/Internet Connection Sharing (ICS) service is running, click **Start**. The Rockwell Software Windows Firewall Configuration Utility window opens. The list of exceptions (things to allow through the firewall) generally includes default SQL Server and e-mail ports.
 - If no exceptions need to be made, none will be listed and the Accept button will be unavailable. In that case, click **Exit** to close this utility.
 - Click **Accept**. On the Confirm Windows Firewall Changes window make the appropriate selection depending on whether your Windows Firewall will be on or off, then click **OK**.

IF YOUR OPERATING SYSTEM IS WINDOWS 2000 SERVER

This operating system does not support Windows Firewall so the Windows Firewall Configuration Utility will not open.

If you have a firewall other than Windows Firewall, use the information in “Network requirements” on page 7 and “Additional ports you may have to open” on page 85 to configure your firewall to allow communication through the appropriate ports and with specific processes.

Checking to see if the client is installed correctly

To check if the client is correctly installed and connected to the FactoryTalk AssetCentre server, start the client. Click **Start > All Programs > Rockwell Software > FactoryTalk AssetCentre Client > AssetCentre Client**.

When the client runs, it checks the server for the latest version of the client software and displays a message if the client software is not the latest version (“The client and server versions are incompatible”). To update the client software, follow the steps in “Installing FactoryTalk AssetCentre clients” on page 42.

For information on getting started with the software, see the online help.

Installing the ProCalV5 client software

If you have purchased the Calibration Management capability for FactoryTalk AssetCentre, install the ProCalV5 client software on the FactoryTalk AssetCentre client computer. This step comes after you have installed the FactoryTalk AssetCentre client software.

To install the ProCalV5 client:

1. Insert the FactoryTalk AssetCentre disc into your computer.
2. The installation program should start automatically. If it does not, open the FactoryTalk AssetCentre disc in My Computer and then run the **Setup.exe** program.
3. Click **Install FactoryTalk AssetCentre v. 2.31.00 CPR9 SR1**.
4. Click **Install ProCalV5**.
5. Click **Product Documentation** on the ProCalV5 install screen.
6. In the window that opens, open the **Installation Guide** folder.
7. Open and review the *ProCalV5 Installation Guide*. Use Microsoft Word to read the guide. Close the window.
8. Click **Client Setup**.
9. Follow the on-screen instructions for the installation.
10. After you install the ProCalV5 client, the ProCalV5 Client Configuration Assistant window opens. This assistant creates the client connection to the ProCalV5 database server. Click **Next**.
11. In the Specify CFG File window, click **Change**.
12. Open the **Client Connection File** folder, select **PROCAL55S.CFG**, and then click **Open**.



Installing DTMs

DTM stands for “Device Type Manager.” It is a software component for devices that contains device information and configuration parameters for that device. If you have purchased the Process Device Configuration capability, install DTMs for the devices you use on every client computer that will communicate with the device.

The device manufacturer provides the DTM for the device. Follow the manufacturer’s instructions to install the DTM.

After you have installed DTMs on the client computers, update the DTM Catalog on every client computer. For information about how to do this, see the FactoryTalk AssetCentre online help.

6

Installing FactoryTalk AssetCentre agents

The Search feature, as well as purchased capabilities, such as the Disaster Recovery capability, require the use of *agents* to perform scheduled operations. Agents are programs that communicate with the FactoryTalk AssetCentre server and perform scheduled tasks on behalf of the FactoryTalk AssetCentre server. Agents allow work to be distributed and shared among multiple computers to spread processing load and speed up operations. When a server needs an agent to perform a task, it locates the computer running the operation and assigns the task to that agent. The agent then reports the task's completion to the server.

For FactoryTalk AssetCentre v. 2.31, only the Disaster Recovery capability and Search feature use agents.

These agents can be installed on the computer running the FactoryTalk AssetCentre server, on computers running the FactoryTalk AssetCentre client, or on any other computer that meets the system requirements and is connected to the FactoryTalk AssetCentre server. See “Client and agent computer requirements” on page 6 for agent computer requirements.

Where to install FactoryTalk AssetCentre agents

Agents can be installed on any computer that:

- is capable of running the agent software (see “Client and agent computer requirements” on page 6).
- is connected to the FactoryTalk AssetCentre server.

If you intend to perform a large number of Disaster Recovery operations, you can install the Disaster Recovery agent on up to five computers on your network to help spread out the processing load. Contact Rockwell Automation if you need to install the agent on more than five computers.

How do you know if you need more Disaster Recovery agents? If scheduled operations are taking longer than desired to complete, then install more Disaster Recovery agents.

If your system uses PanelView Plus operator interfaces, you must install RSLinx Classic, RSLinx Enterprise, and the FactoryTalk View ME software on every agent computer in the system. RSLinx Enterprise must be version 5.00.00 or higher. FactoryTalk View ME is a separate installation, and is not included in the FactoryTalk AssetCentre installation.

Also, for Disaster Recovery functions, the agent computer **MUST** have the appropriate RSLogix programming software for your devices.

Optional upgrades with CPR 9 SR 1

FactoryTalk AssetCentre provides optional upgrades from CPR 9 to CPR 9 SR 1 for these software products used by FactoryTalk AssetCentre agents:

- FactoryTalk Services Platform
- RSLinx Classic Lite
- RSLinx Enterprise

If you already have these products installed, you do not need to reinstall them. If you do not have these products installed, FactoryTalk AssetCentre will install the CPR 9 SR 1 version.

If you already have the CPR 9 version installed and you wish to upgrade to the CPR 9 SR 1 version, you must manually upgrade it from the FactoryTalk AssetCentre installation disc, as described on page 2. We recommend that you perform the upgrade before you begin installing the FactoryTalk AssetCentre Disaster Recovery agent.



If you want to use the CPR 9 SR 1 version of RSLinx Enterprise, you must also use the CPR 9 SR 1 version of FactoryTalk Services Platform.

If you already have version 2.21 or 2.21.01 of FactoryTalk AssetCentre Disaster Recovery agent installed, you will be given the option to upgrade to version 2.31 during the installation process.

Installing the FactoryTalk AssetCentre Disaster Recovery agent



You must have the appropriate RSLogix programming software for your devices installed on the agent computer to run Disaster Recovery schedules.

To install the FactoryTalk AssetCentre Disaster Recovery agent:

1. Log on to the agent computer as an administrator or as a user with administrative privileges.
2. On the agent computer, open Internet Explorer.
3. In the **Address** field of Internet Explorer, type the following address:

`http://servername/rockwellsoftware/assetcentre`

where *servername* is the name of your FactoryTalk AssetCentre server computer.


For example, if your FactoryTalk AssetCentre server is called MYSERVER, type:

`http://MYSERVER/rockwellsoftware/assetcentre`

If you are using SSL, then begin with `https://` instead.

4. Press **Enter**.
5. Internet Explorer displays a page from the server that allows you to install the FactoryTalk AssetCentre agent software.


Click **Install AssetCentre Agents on this computer**.

 If Internet Explorer displays an error message that it can't connect to the install web page, try bypassing the proxy for local addresses. Also make sure that IIS is running on the server. For information on running IIS see "Web page for installing the FactoryTalk AssetCentre client and agent cannot be displayed" on page 74.


If Internet Explorer displays a warning about possible unsafe content, try adding the FactoryTalk AssetCentre Web site (URL above) to your Trusted Sites.

See your Internet Explorer documentation for more information.

6. On the File Download - Security Warning window, click **Run** (or **Open**). Do not attempt to save the installation file—it will **not** run correctly from your local computer.
7. The Install FactoryTalk AssetCentre Agents window opens. The installer searches the computer for required components and displays the results in this window. The installer will not install components that already exist on the computer. Components that will be installed are indicated with a computer icon and a checked box. You cannot select or clear the checkboxes in this window.

 If you see a red "X" next to one or more components, this means that the installer cannot determine whether the component should be installed. Contact Technical Support using the contact information provided on the copyright page at the beginning of this guide.

8. Click **Start**. Follow the on-screen instructions for the components that need to be installed. The following sections provide more information about installing these components.

 The installation of some components may require you to restart your computer. If this is the case and the setup program has not finished installing all of the necessary components, the setup program will restart the next time you log on to your computer.

The following components are checked for and installed or configured during the agent installation:

- **Windows Installer 3.1 v2.** If this component is not already installed on your computer, the setup program will install it. Follow the on-screen installation instructions. If you are prompted to reboot when the installation is complete, close Microsoft Internet Explorer and any FactoryTalk AssetCentre installation windows before rebooting.

- **Microsoft .NET Framework.** The Disaster Recovery agent requires that Microsoft .NET Framework versions 1.1 (with Service Pack 1) and 2.0 be installed on the agent computer. If these components are not already installed, the setup program will install them. Follow the installation instructions on-screen to install them.
- **FactoryTalk Services Platform 2.10.00 or 2.10.01 (CPR9 or CPR9 SR1).** See “Installing FactoryTalk Services Platform” on page 56.
- **Check and Configure FTSP.** This occurs during the FactoryTalk Services Platform installation. See the substeps in step 4 on page 57.
- **RSLinx Classic Lite 2.53.00 (CPR9) or 2.54.00 (CPR9 SR1).** See “Installing RSLinx Classic Lite” on page 58.
- **FactoryTalk AssetCentre Common Components.** See “FactoryTalk AssetCentre Common Components installer” on page 59.
- **FactoryTalk AssetCentre RA Disaster Recovery Agent.** See “FactoryTalk AssetCentre Disaster Recovery agent installer” on page 59
- **FactoryTalk AssetCentre Agent Host.** See “FactoryTalk AssetCentre Agent Host installer” on page 59.
- **RSLogix 5000 Compare v3.** See “RSLogix 5000 Compare installer” on page 59.
- **RSLinx Enterprise 5.00.00 (CPR9) or 5.17.00 (CPR9 SR1).** See “Installing RSLinx Enterprise” on page 60.
- **Launch Rockwell Windows Firewall Configuration Utility.** See “Using the Windows Firewall Configuration Utility” on page 61.

If the computer already has the FactoryTalk AssetCentre server or client installed on it, then the computer will already have everything installed except the FactoryTalk AssetCentre Disaster Recovery agent, the FactoryTalk AssetCentre Agent Host, and RSLogix 5000 Compare. The installation program automatically skips the existing components. Skip those sections in the instructions that follow.

If installing on the server or a client:
Skip to step 4. The FactoryTalk Services Platform has already been installed, but the FactoryTalk Directory must be specified.

Installing FactoryTalk Services Platform

See “Installing the FactoryTalk AssetCentre Disaster Recovery agent” on page 54 for the steps to get to this part of the installation.

FactoryTalk AssetCentre depends on the Rockwell Software FactoryTalk Services Platform to function. If the platform is not installed on the agent computer (or if the correct version is not installed), the setup program will install it. If you have a previous



version of the platform installed, you may need to uninstall it before continuing (the setup program will inform you if this is the case).



By default, all members of the Administrators group on the computer on which you are installing the FactoryTalk Services Platform are added to the Administrators group in the FactoryTalk Directory.

1. Follow the on-screen installation instructions to install the platform. If FactoryTalk Services Platform 2.10.00 or 2.10.01 is already installed on your computer, go to step 4.
2. When you are asked whether you want to install the FactoryTalk Administration Console, be sure the check box is selected (you will need the console to help you configure the FactoryTalk Directory). Continue to follow the on-screen instructions.
3. Click **Finish** on the InstallShield Wizard for the FactoryTalk Services Platform.



Respond to the FactoryTalk Directory Server Configuration window, explained in step 4, with care. Correctly identifying the FactoryTalk Directory is essential to a properly functioning system.

4. After the system checks the FactoryTalk Services Platform configuration, you will see a window with a stop sign on it. The purpose of this window is to set the location of the FactoryTalk Directory. If the computer on which you are installing the software is also the computer that will be the FactoryTalk Directory server, click **Continue** and go on to step 5. If the FactoryTalk Directory server is on a different computer, click **Select FactoryTalk Directory Server** and continue with the instructions below.
 - a. The utility may ask you to log on to FactoryTalk. Log on with your Windows administrator username and password. (As mentioned earlier, members of the Windows Administrators user group were automatically added to the FactoryTalk Directory.)
 - b. In the FactoryTalk Directory Server Location Utility window, click the browse button next to the **Computer hosting directory server** field.
 - c. In the next window, select **Remote computer**. Type the name of your FactoryTalk Directory Server in the field, or click the browse button next to the field to browse for the server.
 - d. Once you have the name of the FactoryTalk Directory Server in the field, click **OK**, and then click **OK** again.
 - e. Click **OK** on the message telling you to restart the computer. The software attempts a connection to the FactoryTalk Directory Server. You may be asked to

log on to the new FactoryTalk Directory Server. If you are, enter the username and password for the Network Directory server administrator on the FactoryTalk Directory Server (not the local FactoryTalk Network Directory), and then click **OK**.

5. When you see a checklist window showing that the FactoryTalk Services Platform components were all installed and configured, click **Continue**. This will proceed to the next segment of the Disaster Recovery agent installation. There may be a delay before you see the next installer start.

If installing on a client:

Skip to "FactoryTalk AssetCentre Disaster Recovery agent installer" on page 59. RSLinx Classic Lite, RSLinx Enterprise, and the common components have already been installed.

Installing RSLinx Classic Lite

See "Installing the FactoryTalk AssetCentre Disaster Recovery agent" on page 54 for the steps to get to this part of the installation.

RSLinx Classic allows you to connect to Rockwell Automation control hardware. If RSLinx Classic is not installed on the agent computer, the installation program for the FactoryTalk AssetCentre agents will install RSLinx Classic Lite. RSLinx Classic is required even if you have RSLinx Enterprise.

The version of RSLinx Classic installed is RSLinx Classic Lite, which is a version that does not support connections through OPC. For more information about RSLinx Classic, see the RSLinx Classic documentation.

If you have RSLinx Classic (version 2.53 or later) installed on your computer, you do not need to install this component (and the FactoryTalk AssetCentre Agents installation program will not ask you to install it).

1. Follow the on-screen instructions until you get to the Standard Setup page of the installation wizard.
2. The Standard Setup page allows you to select the components of the software you want to install and to change the folder where the software is installed. We advise that you install all of the components. Change the settings on this page as desired, and then click **Next**.
3. Continue following the on-screen instructions to complete the installation.
4. On the InstallShield Wizard Completed screen, click **Finish**.
5. Click **Continue** on the Install FactoryTalk AssetCentre Agent window.



If installing on the server:
Skip to the next section. The common components have already been installed.

FactoryTalk AssetCentre Common Components installer

See “Installing the FactoryTalk AssetCentre Disaster Recovery agent” on page 54 for the steps to get to this part of the installation.

To install the common components:

1. Follow the on-screen instructions.
2. If you are using Windows Firewall, you may see messages indicating that Windows Firewall has blocked a Rockwell Automation program. Choose the option to unblock these programs.

FactoryTalk AssetCentre Disaster Recovery agent installer

See “Installing the FactoryTalk AssetCentre Disaster Recovery agent” on page 54 for the steps to get to this part of the installation.

The FactoryTalk AssetCentre Disaster Recovery agent is the component that performs disaster recovery operations (backup operations and backup and compare operations).

To install the FactoryTalk AssetCentre Disaster Recovery agent.

1. Follow the on-screen instructions.

FactoryTalk AssetCentre Agent Host installer

See “Installing the FactoryTalk AssetCentre Disaster Recovery agent” on page 54 for the steps to get to this part of the installation.

The FactoryTalk AssetCentre Agent Host handles agent requests from the FactoryTalk AssetCentre server.

After the Disaster Recovery agent installation is complete, the installation for the FactoryTalk AssetCentre Agent Host begins.

To install the agent host:

1. Follow the on-screen instructions.

RSLogix 5000 Compare installer

See “Installing the FactoryTalk AssetCentre Disaster Recovery agent” on page 54 for the steps to get to this part of the installation.

To be able to perform compares between RSLogix 5000 projects, the Disaster Recovery agent uses version 3.0 or later of the RSLogix 5000 Compare utility.

To install the RSLogix 5000 Compare utility:

1. Follow the on-screen instructions.
2. If you have RSLogix 5000 software installed on the computer on which you are installing the FactoryTalk AssetCentre agents, you can add a Compare option to the RSLogix 5000 Tools menu. (This requires version 13 or later of RSLogix 5000.) To do this, select the **Add Compare Tool to RSLogix 5000 Tools menu** check box. Click **Next**.
3. On the Select Installation Folder screen, you can choose where the compare utility is installed. By default, the utility is installed in the C:\Program Files\Rockwell Software\RSLogix 5000 Compare v2 folder (the folder name was not updated to v3 for this release). You can change this folder by typing a new path in the Folder field, or by clicking the Browse button.



The Select Installation Folder screen also asks whether you want to install the compare utility for yourself or for everyone who uses the computer. Select **Everyone**. This is very important to the proper functioning of the agent.

4. Click **Next**.
5. Continue to follow the on-screen instructions.

Installing RSLinx Enterprise

See *"Installing the FactoryTalk AssetCentre Disaster Recovery agent"* on page 54 for the steps to get to this part of the installation.

RSLinx Enterprise is required for your FactoryTalk AssetCentre system to communicate with PanelView Plus operator interfaces. Note that RSLinx Classic Lite is still required for the FactoryTalk AssetCentre agent even if you install RSLinx Enterprise.

If you have RSLinx Enterprise (version 5.00.00 or higher) installed on your computer, you do not need to install this component (and the FactoryTalk AssetCentre agent installation program will not ask you to install it).

1. Follow the on-screen instructions.
2. When prompted for a serial number, enter any 10-digit number, for example 1234567890.
3. In the Setup Type page of the installation wizard, select Standard Feature Set Installation, and then click **Next**.
4. Continue following the on-screen instructions to complete the installation.



5. On the InstallShield Wizard Completed screen, click **Finish**.
6. Click **Exit** on the RSLinx Enterprise installation menu.
7. Click **Continue** on the Install FactoryTalk AssetCentre Agent window.

Using the Windows Firewall Configuration Utility

See “Installing the FactoryTalk AssetCentre Disaster Recovery agent” on page 54 for the steps to get to this part of the installation.

IF YOUR OPERATING SYSTEM IS WINDOWS XP SP 2 OR HIGHER OR WINDOWS SERVER 2003 SP 1 OR HIGHER

These operating systems support Windows Firewall. The Windows Firewall Configuration Utility will run whether you are using the firewall or not.

- If your Windows Firewall/Internet Connection Sharing (ICS) service is stopped or is disabled, the FactoryTalk AssetCentre Windows Firewall Configuration window will indicate this with a red x. Click **Continue**. The FactoryTalk AssetCentre agent installation is complete.

If you are using a firewall other than Windows Firewall, use the information in “Network requirements” on page 7 and “Additional ports you may have to open” on page 85 to configure your firewall to allow communication through the appropriate ports and with specific processes.

- If your Windows Firewall/Internet Connection Sharing (ICS) service is running, click **Start**. The Rockwell Software Windows Firewall Configuration Utility window opens. The list of exceptions (things to allow through the firewall) generally includes default SQL Server and e-mail ports.
 - If no exceptions need to be made, none will be listed and the Accept button will be unavailable. In that case, click **Exit** to close this utility.
 - Click **Accept**. On the Confirm Windows Firewall Changes window make the appropriate selection depending on whether your Windows Firewall will be on or off, then click **OK**.

IF YOUR OPERATING SYSTEM IS WINDOWS 2000 SERVER

This operating system does not support Windows Firewall so the Windows Firewall Configuration Utility will not open.

If you have a firewall other than Windows Firewall, use the information in “Network requirements” on page 7 and “Additional ports you may have to open” on page 85 to configure your firewall to allow communication through the appropriate ports and with specific processes.

Configuring for security-enabled RSLogix programming software

If FactoryTalk Security is enabled in your RSLogix programming software (RSLogix 5, RSLogix 500, or RSLogix 5000), you must configure the Disaster Recovery agent and FactoryTalk Security to grant the necessary permissions for Disaster Recovery operations.



Scheduled events for Rockwell Automation processors (Logix5000, MicroLogix, SLC 500, and PLC-5 processors) will fail if FactoryTalk Security is enabled for that device's programming software (RSLogix 5000 versions 16 and earlier, RSLogix 500, or RSLogix 5). The problem is fixed in RSLogix 5000 versions higher than 16 and a software patch is provided to fix the problem for RSLogix 500 and RSLogix 5. The patched version of RSLogix 500 is 8.10.00 and the patched version of RSLogix 5 is 8.00.05.01. For information about installing the patch, see the *FactoryTalk AssetCentre Release Notes*, located on the FactoryTalk AssetCentre Installation CD and on the Start menu in the FactoryTalk AssetCentre Server group. This issue does not affect other devices' schedules (such as robots or PanelView devices). If a schedule contains both Rockwell Automation processors and other devices, the scheduled event will only fail for those Rockwell Automation processors for which FactoryTalk Security is enabled in the programming software; the event will complete for the other devices.

These instructions assume that the FactoryTalk AssetCentre agent software has been installed and that all RSLogix software programs that will be used in the system are also installed on each agent computer.

If operating in a Windows domain

1. Create a domain account for the Verification Agent service to run as. (The Verification Agent service is for the Disaster Recovery agent.) This is generally performed by someone in your Information Technology department. This account must be used exclusively for the service, not by users.
2. On each agent computer:
 - Add the new domain account to the Administrator user group in Windows.
 - Configure the Verification Agent service to run as the new domain account created above. To do so, open the Services utility in Microsoft Windows. Find the Verification Agent service and edit its properties to log on as the account created above.
3. On any computer in the system, open the FactoryTalk Administration Console (logging on to the Network directory using a FactoryTalk Administrator account) and add the new domain account as a new Windows-linked user.
4. Grant this user read access to the FactoryTalk Directory. To do so, right-click the Network node at the top of the tree, and then select **Security**. On the **Permissions** tab, select the domain account and then expand the **Common** permissions group. Make sure the **Read** permission is set to **Allow**.



5. Set permissions for RSLogix software (depending on what type of processors you are using). Under **System** in the Explorer pane, right-click **Networks and Devices** and select **Security**. On the **Permissions** tab, select the new domain user. (If the user account you just created doesn't appear in the list of users, add it.) Expand the permissions group for the appropriate RSLogix software and set the following permissions to **Allow**:
 - For RSLogix 5 grant Offline Program File Monitoring, Save, and Upload.
 - For RSLogix 500 grant Offline Program File Monitoring, Save, and Upload.
 - For RSLogix 5000 grant Project: Export, Project: Go Online, Project: Open, Project: Save, and Project: Upload.
6. Configure FactoryTalk Security to use single sign-on. Still in the FactoryTalk Administration Console, navigate to **System > Policies > System Policies** in the Explorer pane. Double-click **Security Policy**. Set the **Use single sign-on** policy to **Enabled**.

If operating in a Windows workgroup

Perform these steps on each agent computer in the system. These steps show you how to create a new Windows user account and a new FactoryTalk user account for each agent computer.

1. Install all RSLogix software programs that will be used in the system if you have not already done so.
2. On the agent computer, use the Computer Management utility in Microsoft Windows to create a Windows user account that can be used to authenticate with FactoryTalk Security.
3. Add the new Windows user account to the local Administrators group.
4. Configure the Verification Agent service to run as the new Windows user account you created above. To do so, open the Services utility in Microsoft Windows. Find the Verification Agent service and edit its properties to log on as the account created above.
5. Open the FactoryTalk Administration Console and add the new Windows user account created above as a new Windows-linked user.

Perform these steps on any computer connected to the FactoryTalk Network Directory. These steps need only be performed once and will be in effect for the entire FactoryTalk Network Directory.

1. In the FactoryTalk Administration Console, create a new user group called "Local Agent Users." Add each of the new FactoryTalk users created in step 5 above to the

- Local Agent Users group. This will facilitate making security settings because you will be able to set them once for the whole group, rather than for each user.
2. Grant the Local Agent Users group read access to the FactoryTalk Directory. To do so, right-click the **Network** node at the top of the tree, and then select **Security**. On the **Permissions** tab, select the **Local Agent Users** group and then expand the **Common** permissions group. Make sure the **Read** permission is set to **Allow**.
 3. Set permissions for RSLogix software (depending on what type of processors you are using). Under **System** in the Explorer pane, right-click **Networks and Devices** and select **Security**. If the Local Agent Users group doesn't appear in the list, add it. On the **Permissions** tab, select the **Local Agent Users** group. Expand the permissions group for the appropriate RSLogix software and set the following permissions to **Allow**:
 - For RSLogix 5 grant Offline Program File Monitoring, Save, and Upload.
 - For RSLogix 500 grant Offline Program File Monitoring, Save, and Upload.
 - For RSLogix 5000 grant Project: Export, Project: Go Online, Project: Open, Project: Save, and Project: Upload.
 4. Configure FactoryTalk Security to use single sign-on. Still in the FactoryTalk Administration Console, navigate to **System > Policies > System Policies** in the Explorer pane. Double-click **Security Policy**. Set the **Use single sign-on** policy to **Enabled**.

Checking to see if the agent software is current

Unlike the FactoryTalk AssetCentre client, the FactoryTalk AssetCentre agent does not display a message if the agent does not have the latest version of the software. Instead, the agent does not start, and logs a message in the System Event log and the AssetCentre Event log.

To check if the FactoryTalk AssetCentre software on the agent is up to date, start a FactoryTalk AssetCentre client. The client does not have to be on the same computer as the agent. Click **Start > All Programs > Rockwell Software > FactoryTalk AssetCentre Client > AssetCentre Client**. The number of running agents is displayed in the status bar of the client. If one or more agents are not running, and the client software has been recently updated, then the agent software may need to be updated as well.

To update the agent software, follow the steps in “Installing the FactoryTalk AssetCentre Disaster Recovery agent” on page 54. After you start the Install FactoryTalk AssetCentre Agent program from the FactoryTalk AssetCentre server website, the installer searches the computer for components that need to be updated, and displays the results in this



window. Components that will be updated are indicated with a computer icon and a checked box.

7

Configuring FactoryTalk AssetCentre

Configuring for client access to the server

For clients to be able to access the FactoryTalk AssetCentre server, the FactoryTalk Directory and FactoryTalk Security must be configured to give clients access. To configure access, you will need to use the FactoryTalk Administration Console.

The FactoryTalk Directory uses two factors to determine who should have access to any given function:

- **The user's account**, which can either be a FactoryTalk Directory account or a Windows domain account. This identifies the user.
- **The computer from which the user is accessing the FactoryTalk Directory**. This allows you to limit which computers can access the directory, and also allows you to determine whether certain functions can or cannot be performed from a given computer. For example, you can configure the FactoryTalk Directory to give access to a user from her or his own computer but not from another computer.

At a minimum, you must add the FactoryTalk AssetCentre users and their computers to the FactoryTalk Directory, and you must configure access privileges for FactoryTalk AssetCentre in the FactoryTalk Directory.

Adding users to the FactoryTalk Directory

A user must have a FactoryTalk Directory user account in order to use FactoryTalk AssetCentre.




This section contains only basic instructions for using the FactoryTalk Directory and FactoryTalk Security. For background information and information regarding more advanced procedures, please see the online help for the FactoryTalk Administration Console.

By default, all members of the Administrators group on the computers on which you installed the FactoryTalk Services Platform were added to the Administrators group in the FactoryTalk Directory. Also, any rights that you assign to a Windows User Group are assigned to all members of that group.

To add a user to the FactoryTalk Directory:

1. Start the FactoryTalk Administration Console (click **Start > All Programs > Rockwell Software > FactoryTalk Administration Console**).
2. Log on to the Network directory using a FactoryTalk Administrator account.

3. Open the **Users and Groups** folder.
 4. Under the Users and Groups folder, right-click the **Users** folder, and then select **New**.
 5. Specify whether you want to create a new *User* or a *Windows-Linked User*. User accounts are visible only to the FactoryTalk system and their access is independent of Windows. A Windows-linked user is validated by Windows. See the FactoryTalk help topic “Choosing between FactoryTalk Security accounts and Windows-linked accounts” for more information. (A FactoryTalk Security account is the same as a *User* account.) To find this help topic, open the FactoryTalk Administration Console. Select **Help > Contents**. On the **Index** tab, look up “user accounts” and double-click **choosing FactoryTalk or Windows-linked**.
 - If you may need to use FactoryTalk AssetCentre while disconnected from the network, use FactoryTalk Security user accounts. Windows-linked user accounts will not be able to authenticate with the domain while disconnected.
 - If you choose to use Windows-linked users, consider using Windows-linked *group* accounts rather than Windows-linked user accounts if possible. This simplifies the process if you ever move your software to a different domain. You cannot move individual Windows-linked user accounts from one domain to another. You can move Windows-linked group accounts to a new domain, while retaining all of the security permissions for the group. If you change the domain an individual Windows-linked user account belongs to, you must delete the old account, create the new account, and then recreate all of the security permissions for the new account.
-  If you have users who need similar access to features of FactoryTalk AssetCentre, consider grouping users to make assigning security privileges easier. For example, you can group all of your electricians into an “Electricians” group, and then provide security access for them as a group. For information about grouping users, see the online help for the FactoryTalk Administration Console.
6. Enter the information for the user.

Adding computers to the FactoryTalk Directory

When the FactoryTalk Services Platform is installed on a computer, that computer is automatically added to the FactoryTalk Network Directory. Because the FactoryTalk Services Platform is included in the FactoryTalk AssetCentre installation, your client computers should already be in the FactoryTalk Network Directory.



For a user to be able to use FactoryTalk AssetCentre, the user's computer must be in the FactoryTalk Directory. For instructions on how to add a computer, refer to the FactoryTalk Help in the FactoryTalk Administration Console.



If you have a significant number of computers for which you need to permit or restrict access, consider grouping them to make assigning security privileges easier. For example, you can group all of the computers used in offices away from the plant floor and restrict access to features that should be used only from computers stationed where the user can see the automation system directly. For information about grouping computers, see the online help for the FactoryTalk Administration Console.

Configuring feature security for FactoryTalk AssetCentre users

By default, all users and the Administrators group in FactoryTalk Directory can perform any task in the FactoryTalk AssetCentre software. To deny specific users the right to perform tasks in FactoryTalk AssetCentre, you must edit the Feature Security settings in the FactoryTalk Administration Console.



Never explicitly deny rights to the All Users or Administrators group in FactoryTalk. Rather, set up specific user groups of your own and deny rights to those groups. Denying rights to All Users or Administrators could lock everyone out of the system and would deny rights in all FactoryTalk-enabled products using FactoryTalk version 2.10.00 (CPR 9) or version 2.10.11 (CPR 9 SR 1).


To change which users can perform tasks in FactoryTalk AssetCentre:

1. Start the FactoryTalk Administration Console (click **Start > All Programs > Rockwell Software > FactoryTalk Administration Console**).
2. Log on to the Network directory using a FactoryTalk Administrator account.
3. In the Explorer pane of the FactoryTalk Administration Console, navigate to **System > Policies > Product Policies > FactoryTalk AssetCentre**.
4. Double-click **Feature Security**.



There is also a Server Settings object in the FactoryTalk AssetCentre folder. Do NOT attempt to change any of the settings in this object. Doing so may render your FactoryTalk AssetCentre system inoperative. If you need to change server settings (to use a different mail server, for example), click **Start > All Programs > Rockwell Software > FactoryTalk AssetCentre Server > Server Settings**.

- In the Feature Security Properties window, click the policy you want to change, and then click the browse button for the policy. See the table after step 8 for a description of each policy.

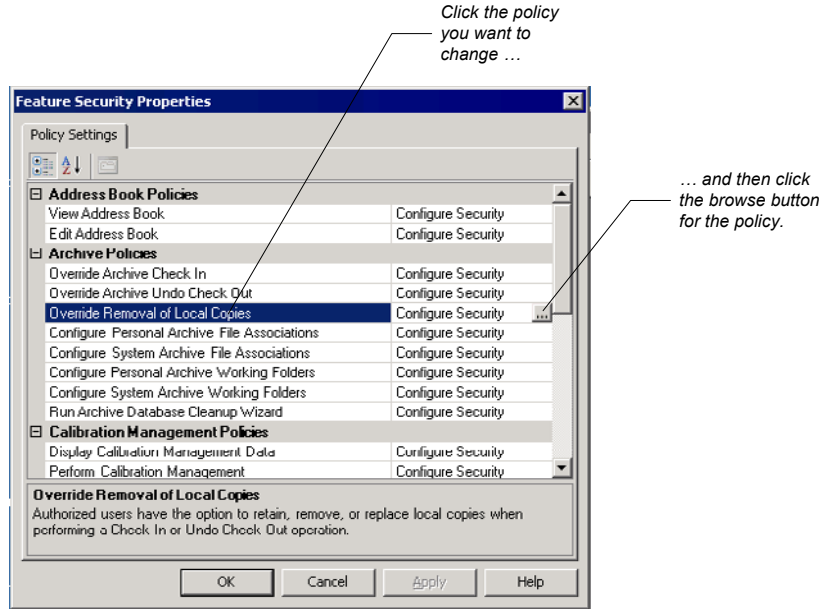

- In the Configure Securable Action dialog box, select the user or group for whom you want to assign permissions. (If the user or group does not appear in the list, click **Add**, click **Show all**, select the user or group, and then click OK.)
- Click the appropriate box to allow or deny the user permission to the selected feature.
- Click OK.

This Policy Setting	Controls whether users can
View Address Book	View the Address Book (which contains addresses for the purpose of sending automatic e-mail notifications).
Edit Address Book	Edit or add contacts and groups in the Address Book (which contains addresses for the purpose of sending automatic e-mail notifications).
Override Archive Check In	Check in a file regardless of who checked it out or from where it was checked out.
Override Archive Undo Check Out	Undo a check out even if a different user checked the file out.

This Policy Setting	Controls whether users can
Override Removal of Local Copies	Choose to keep local copies of checked-in files on their computer. If this right is allowed, the user can keep local copies. If this right is denied, the user is not given this option.
Configure Personal Archive File Associations	Configure which software product launches when opening a particular type of file. If a personal file association is set, it will take precedence over the system file association.
Configure System Archive File Associations	Configure which software product launches when opening a particular type of file. This setting applies unless the user has specified a personal file association.
Configure Personal Archive Working Folders	Set a personal working folder for checking out files. For more information on working folders and personal working folders see the FactoryTalk AssetCentre client online help.
Configure System Archive Working Folders	Set the system working folder to which all users check out files unless they have a personal working folder. For more information on working folders and system working folders see the FactoryTalk AssetCentre client online help.
Run Archive Database Cleanup Wizard	Run the wizard to delete unused versions of files.
Display Calibration Management Data	View Calibration Management data in FactoryTalk AssetCentre.
Perform Calibration Management	Perform Calibration Management tasks in ProCalV5 software.
Administer Calibration Users	Administer users, groups, and permissions in ProCalV5 software. Note that this policy only determines if the user is automatically added to the Administrator group in the ProCalV5 software. Once the user is added to ProCalV5, changing this policy for an AssetCentre user does not change the user's ProCalV5 security permissions.
Switch to Design mode	Enter Design mode, in which the user can edit the asset tree.
View Event Log	Display the Event Log and run a search on the Event Log.
View Audit Log	Display the Audit Log and run a search on the Audit Log.
View Diagnostics and Health Log	Display the Diagnostics and Health Log and run a search on the Diagnostics and Health Log.
Change Diagnostics and Health Log Message	Change the status of or add a comment to a Diagnostics and Health Log record.
View Diagnostics and Health Log Status	View the status history for a Diagnostics and Health Log record.

This Policy Setting	Controls whether users can
Run Log Database Cleanup Wizard	Run the wizard to export or delete log records.
Enable or Disable DTMs	Enable or disable DTMs. DTMs that are disabled cannot be added to the DTM network. If they are already added to the network, they cannot be opened or used.
Edit DTM Network	Edit the DTM network.
Create a new schedule	Create a new schedule (backup or backup and compare).
Edit a schedule	Change existing schedules.
Delete a schedule	Delete schedules.
View a schedule	View the Schedules tab, which displays a list of existing schedules and their status.
Command a schedule	Issue commands to a schedule, such as making the schedule active or running the schedule immediately.
Create a Search	Set up a new search to find entries matching specified criteria in one of the logs, in the Archive History, or in Archive Check Out Status information.

For more information on these policy settings or the features to which they refer, see the FactoryTalk AssetCentre client online help.

8

Troubleshooting FactoryTalk AssetCentre installation

General installation

A red x appears next to an item to be installed

The initial window in each installation (server, client, and agent) displays a list of all necessary components, whether they were found on the computer, and whether they will be installed. A red x is displayed next to a component if the installer could not determine whether the correct version already exists on that computer.

Contact Technical Support using the contact information provided on the copyright page at the beginning of this guide.

A “Program Maintenance” window appears while installing

This indicates that the component of the software you are installing is already installed. You do not need to install it again. If you suspect your installation is damaged, you can choose to repair the installation.

Server installation

SQL collation error encountered during database installation

The SQL Server collation must be case-insensitive for use with FactoryTalk AssetCentre software. If your SQL Server collation is case-sensitive, the FactoryTalk AssetCentre database installation will fail. Follow the directions here if your SQL Server collation is case-sensitive.

- If this SQL Server has no other databases on it:
 - Either:** Uninstall SQL Server and reinstall it using the default collation in the setup program.
 - Or:** Rebuild the master database using a case-insensitive collation. Refer to the SQL Server 2005 online books for instructions.
- If this SQL Server has other databases on it, then setup or use another SQL Server that is configured with a case-insensitive collation.

If you have an MSDN subscription, you can find more information at <http://msdn2.microsoft.com/en-us/library/ms143508.aspx>, or search the Microsoft MSDN site for SQL Server 2005 collation settings.

Unable to log on to SQL Server during server installation

The logon during the installation process requires the use of the SQL Server sa (system administrator) account. If you configured your SQL Server to use mixed (both SQL Server and Windows domain) authentication, the sa account is available. Use the password you created for the sa account when the installation program prompts you for it. If your SQL Server installation is not configured for mixed authentication, you will need to change the authentication method. See the documentation for SQL Server for more information.

If you have forgotten your sa account password, you will need to change it. See the Microsoft SQL Server documentation for more information.

Client and agent installation

Web page for installing the FactoryTalk AssetCentre client and agent cannot be displayed

- Make sure the FactoryTalk AssetCentre server computer is running. In the Windows Services utility, make sure that the FactoryTalk AssetCentre Server service is running.
- Make sure you have access to your local area network.
- Make sure IIS is running on the server computer. For instructions, see the gray box, next.
- Try logging on to the server computer from the client. On the client computer, click **Start**, then select **Run**. In the Open field type two backslashes and then the server name (for example, \\ourserver). Click **OK**. You will be asked to log in to the server.
- If you are using a firewall, make sure File and Printer Sharing is permitted through the firewall. Port 80 (or whatever port used for HTTP on the server machine) also needs to be permitted.



TO MAKE SURE IIS IS RUNNING ON THE SERVER COMPUTER

- a. **For Windows Server 2003:** Click **Start**. On the Start menu, right-click the **My Computer** icon, and then click **Manage**. This starts the Computer Management console.

For Windows 2000 Server: On the Windows Desktop, right-click the **My Computer** icon, and then click **Manage**. This starts the Computer Management console.

- b. In the Computer Management console, open **Services and Applications**.
- c. Click **Internet Information Services**. The right pane lists the Internet services running under IIS. Open the **Web Sites** folder, and make sure the correct web site for IIS is “Running.” This is generally the “Default Web Site,” however, if you have created a different web site for IIS (see page 20) be sure to select that web site instead. If the web site is not running, continue to step d.
- d. To start the service, right-click the **Default Web Sites** icon, and then select **Start**.

“Error reading Primary Server Name from FactoryTalk Directory” during client installation

This error occurs when the computer on which you are installing the client is not using the same FactoryTalk Directory as the computer running the FactoryTalk AssetCentre server, or there was an error in the FactoryTalk Services Platform.

1. On the FactoryTalk AssetCentre server computer, set the FactoryTalk Directory location. Click **Start > All Programs > Rockwell Software > FactoryTalk Tools > Specify FactoryTalk Directory Location**.
2. Log in if prompted to do so, and then specify the location of the FactoryTalk Directory.
3. Close any clients that are connected to the server.
4. Restart the FactoryTalk Directory Server.



“At least one service or driver failed during system startup. Use Event Viewer to examine the event log for details” appears when attempting to start the client

This message may appear when launching RSLinx Classic on a system that has both RSLinx Classic and RSLinx Enterprise installed. The System Event log contains the message, “The A-B Virtual Backplane service failed to start due to the following error: The system cannot find the file specified.”

In some cases, the Virtual Backplane driver does not get installed correctly. For more information see the Rockwell Automation Knowledgebase article 34128 (<http://www.rockwellautomation.com/knowledgebase/>).

“Error initializing FactoryTalk AssetCentre. Could not load file or assembly... CalibrationPlugin.dll” appears when attempting to start the client

This message is displayed when you start the FactoryTalk AssetCentre client if the FactoryTalk AssetCentre Calibration Management client was not installed in the same directory as the FactoryTalk AssetCentre client. To fix this problem, you must uninstall and then reinstall the FactoryTalk AssetCentre client, making sure to install the FactoryTalk AssetCentre Calibration Management client in the same directory as the FactoryTalk AssetCentre client.

Other errors starting the client

If the client won't start or you see other error messages not specifically mentioned above, try the following:

- Make sure the client computer is connected to the network and the network is operational.
- Make sure the FactoryTalk AssetCentre server computer is running.
- Make sure the FactoryTalk AssetCentre Server service, IIS, and SQL Server are all running on the server computer (and the database computer if separate). To check IIS, see the gray box “To make sure IIS is running on the server computer” on page 75.
- Make sure the correct FactoryTalk Directory is specified. On the machine running the client, select **Start > All Programs > Rockwell Software > FactoryTalk Tools > Specify FactoryTalk Directory Location**.
- If you are running in an environment without a domain controller (in a workgroup), you may need to turn off the single sign-on feature of FactoryTalk. See the FactoryTalk Help for more information.

- Make sure the server location setting is correct. On the server computer, click **Start > All Programs > Rockwell Software > FactoryTalk AssetCentre Server > Server Settings**. The server location must be set in this utility, NOT in the FactoryTalk Administration Console.
- Make sure the SQL Connection is set properly. On the server computer, click **Start > All Programs > Rockwell Software > FactoryTalk AssetCentre Server > Data Source Configuration**.
- If you are using a firewall, make sure your firewall is configured properly to permit access to the FactoryTalk AssetCentre Server. See “Network requirements” on page 7 and “Additional ports you may have to open” on page 85.

Starting the agent

If the FactoryTalk AssetCentre software installed on the server has been updated, the agent will not start until the software on the agent is updated. See “Checking to see if the agent software is current” on page 64.

Using Calibration Management

“No ProCalV5 Server connection information exists on the FactoryTalk AssetCentre server” appears when attempting to use Calibration Management features

This error message is displayed when you attempt to use the Calibration Management capability, but have not installed the FactoryTalk AssetCentre Calibration Management server. See “Installing the ProCalV5 server software after the FactoryTalk AssetCentre server” on page 38.

This error message is also displayed if you have installed the FactoryTalk AssetCentre Calibration Management server, but have not run the ProCalV5 Data Source Edit Wizard. See “Running the ProCalV5 Data Source Edit Wizard” on page 38.

“Error executing ProCalV5 commands, check ProCalV5 installation” appears when attempting to use Calibration Management features

This error message is displayed when you attempt to use the Calibration Management capability, but have not installed the FactoryTalk AssetCentre Calibration Management client. See “FactoryTalk AssetCentre Calibration Management client software installer” on page 46.



“Error initializing FactoryTalk AssetCentre. Could not load file or assembly... CalibrationPlugin.dll” appears when attempting to start the client

This message is displayed when you start the FactoryTalk AssetCentre client if the FactoryTalk AssetCentre Calibration Management client was not installed in the same directory as the FactoryTalk AssetCentre client. To fix this problem, you must uninstall and then reinstall the FactoryTalk AssetCentre client, making sure to install the FactoryTalk AssetCentre Calibration Management client in the same directory as the FactoryTalk AssetCentre client. See “Installing FactoryTalk AssetCentre clients” on page 41.

Unable to run the ProCalV5 Data Source Edit Wizard

If the ProCalV5 Data Source Edit Wizard displays an error when you run it (by clicking **Start > All Programs > Rockwell Software > FactoryTalk AssetCentre Server > ProCalV5 Data Source Configuration**), the cause may be that the FactoryTalk AssetCentre Calibration Management server was not installed in the same directory as the FactoryTalk AssetCentre server. To fix this problem, you must uninstall and then reinstall the FactoryTalk AssetCentre server, making sure to install the FactoryTalk AssetCentre Calibration Management server in the same directory as the FactoryTalk AssetCentre server.



Installing Microsoft SQL Server 2000

FactoryTalk AssetCentre can use Microsoft SQL Server 2000 (either Enterprise Edition or Standard Edition) rather than the recommended Microsoft SQL Server 2005. Follow these instructions to install SQL Server 2000.

Installing Microsoft SQL Server 2000



After you install Microsoft SQL Server 2000, you **must install SQL Server 2000 Service Pack 4 (or higher)**!

See “Installing Microsoft SQL Server 2000 Service Pack 4” on page 83 for more information.

FactoryTalk AssetCentre uses a Microsoft SQL Server database to store project files and user data. If you already have SQL Server 2000 installed on the computer you are going to use as your FactoryTalk AssetCentre server, you can skip these steps (however, you may need to reconfigure the server).

If you use an existing SQL Server installation:

The SQL Server collation must be dictionary-order, case-insensitive for use with FactoryTalk AssetCentre software. If your existing SQL Server collation is case-sensitive, the FactoryTalk AssetCentre database installation will fail. Follow the directions here if your SQL Server collation is NOT dictionary-order, case-insensitive.

- If this SQL Server has no other databases on it:
 - Either:** Uninstall SQL Server and reinstall it using the default collation in the setup program. (This statement applies to English language Microsoft Windows operating systems and SQL Server software. For other languages, be sure to select a dictionary-order, case-insensitive collation when reinstalling.)
 - Or:** Rebuild the master database using a dictionary-order, case-insensitive collation. Refer to the SQL Server 2000 online books for instructions.
- If this SQL Server has other databases on it, then setup or use another SQL Server that is configured with a dictionary-order, case-insensitive collation.

If you have an MSDN subscription you can find more information at [http://msdn2.microsoft.com/en-us/library/aa176550\(SQL.80\).aspx](http://msdn2.microsoft.com/en-us/library/aa176550(SQL.80).aspx), or search the Microsoft MSDN site for SQL Server 2000 collation settings.

To install SQL Server 2000 so it is compatible with FactoryTalk AssetCentre server:

1. Log on to the server computer as an administrator or as a user with administrative rights.



It is possible to install SQL Server 2000 on a different computer from the one on which you will install the FactoryTalk AssetCentre server software.

2. Start the SQL Server 2000 installation from the Microsoft SQL Server 2000 CD.
3. Follow the on-screen instructions. In the Setup Type window:
 - For English language operating systems and SQL Server software, select **Typical**.
 - For non-English language operating systems or SQL Server software, select **Custom** so that you can specify the correct collation settings in step 4c below.
4. Follow the on-screen instructions for installation. See the steps below for information about particular settings.
 - a. The Services Accounts window of the installation program asks how you want to run the services for the SQL Server. Select **Use the Local System account**.



You can run the SQL Server using a domain account. This can, however, complicate system maintenance (for instance, when changing passwords). If you are not sure of the type of account you should use for running the SQL Server, consult your network administrator.

- b. In the Authentication Mode window, click **Mixed Mode (Windows Authentication and SQL Server Authentication)**. This means that both the SQL Server and the Windows domain can authenticate users for the SQL Server. When you click Mixed Mode, fields open for entering the password for the sa (SQL Server system administrator) account password. **Do not forget the password.** You will need this password when you install the FactoryTalk AssetCentre server.



The Authentication Mode window has a “Blank Password” check box. Checking this box allows you to have an sa account that has no password. **Do not check this box under any circumstances!** Doing so leaves your SQL Server and your computer open to attack.

- c. If you chose a custom setup type in step 3, then in the Collation Settings window, select **SQL Collations** and a dictionary-order, case-insensitive collation.



The collation settings must be case-insensitive! If the settings are case-sensitive, the FactoryTalk AssetCentre database installation will fail.



- d. Follow the on-screen instructions to complete the installation.

Installing Microsoft SQL Server 2000 Service Pack 4

After you install Microsoft SQL Server 2000, you **must** install the latest SQL Server 2000 service pack (at the time of this writing, Service Pack 4 is the latest service pack). The service pack is necessary for the software to run properly and will protect your SQL Server 2000 server from certain types of attacks.

To obtain this service pack, go to the Microsoft website, www.microsoft.com, and search for “SQL Server 2000 Service Pack.”



Reference

Additional ports you may have to open

If you are using a firewall, you may need to open ports for other Rockwell Automation products as well as for FactoryTalk AssetCentre. For the ports to open for FactoryTalk AssetCentre, see “Network requirements” on page 7.

This port	Of this type	Is used with this product	For this purpose
25	TCP	1769-L35E RSBizWare RSSql RSView Messenger	Outbound e-mail only
67-68	UDP	1734-AENT 1747-L55x 1756-ENBT 1756-ENET 1756-EWEB 1761-NET-ENI 1769-L35E 1785-ENET 1785-LXXE 1788-ENBT 1794-AENT 5820-EI PowerFlex Drives PowerMonitor 3000 PanelView PanelView Plus	Client only
69	UDP	5820-EI	For binary download, used in conjunction with BootP

This port	Of this type	Is used with this product	For this purpose
400-402	TCP	RSSql	Transaction Manager, Compression Server, and Configuration Server
1089	TCP / UDP		Foundation Fieldbus
1090	TCP / UDP		
1091	TCP / UDP		
1330	TCP	FactoryTalk	Object RPC
1331	TCP	FactoryTalk	Service control
1332	TCP	FactoryTalk	Server health
1433	TCP	RSMACC	SQL Server Communication (default port)
2222	TCP	1747-L55x 1771-DMC(x) 1785-ENET 1785-LxxE 5820-EI INTERCHANGE PowerMonitor II RSLinx	Uses port 2223 as the source port for TCP connections
2222	UDP	1734-AENT 1756-ENBT 1769-L35E 1788-ENBT 1794-AENT	I/O communications (used only by products that support I/O over EtherNET/IP)
3060	TCP	FactoryTalk	Directory Server file transfer
3622	TCP / UDP		
4120	TCP	RSBizWare	Production Server
4121	TCP	RSBizWare	Server Manager
4122	TCP	RSBizWare	PlantMetrics Server
4123	TCP	RSBizWare	Task Manager
4124	TCP	RSBizWare	Scheduler Server
4125	TCP	RSBizWare	Scheduler CTP Server
6543	TCP	FactoryTalk	Alarm Server
7600	TCP	FactoryTalk	Event Multiplexor

Index

Symbols

.NET installation ■ 30, 44, 56

A

access to features ■ 69

activating

FactoryTalk AssetCentre ■ 25, 26, 27

activation

about ■ 24

adding in future ■ 25

capability ■ 24

capacity ■ 24

installing the activation client ■ 27

refresh ■ 25

types of ■ 24

Activation Wizard ■ 27

agents ■ 4

agent does not run ■ 64

Disaster Recovery, installing ■ 54

installing ■ 53

not starting ■ 78

system requirements ■ 6

updating from server ■ 64

where to install ■ 53

Archive database in RSMACC ■ 11

import affects label timestamp ■ 11

asset tree ■ 14

Audit database in RSMACC ■ 11

C

Calibration Management capability

activation ■ 24

installing client ■ 46

installing ProCalV5 client ■ 41, 50

installing ProCalV5 server ■ 28, 38

installing server ■ 29, 36, 50

operating system language ■ 5, 6

ProCalV5 Connection Installer ■ 29, 36, 50

requirements ■ 5, 6

Calibration Management client, installing ■ 46

Calibration Management server, installing
■ 29, 36, 50

capabilities

agents and ■ 53

types ■ 24

capacity activation ■ 24

clients ■ 4

error starting ■ 76

installing ■ 42

running ■ 50, 64

system requirements ■ 6

updating from server ■ 50

where to install ■ 41

computers

adding to FactoryTalk Directory ■ 68

Configure Server Settings utility ■ 34

configuring

access to features ■ 69

client computers ■ 68

security ■ 69

security and RSLogix ■ 62

users ■ 67

connecting ProCalV5 server ■ 38

converting

from RSMACC ■ 11

from RSMACC Change Management ■ 12

CPR 9 SR 1, upgrading

FactoryTalk Activation ■ 2

FactoryTalk AssetCentre ■ 1

FactoryTalk AssetCentre agents ■ 54

FactoryTalk AssetCentre clients ■ 42

FactoryTalk AssetCentre server ■ 29

FactoryTalk Services Platform ■ 2

RSLink Classic ■ 2

RSLink Enterprise ■ 2

RSLogix 500 ■ 2

CPR 9, upgrading to CPR 9 SR 1 ■ 1, 2

D

Database Installer utility ■ 33

Database Migration Wizard ■ 13

- Database User Configuration utility ■ 34
- databases
 - Archive - RSMACC ■ 11
 - Audit - RSMACC ■ 11
 - Diagnostics and Health - RSMACC ■ 11
 - Event - RSMACC ■ 11
 - migrating from RSMACC ■ 11, 13
 - purging old RSMACC data before migration ■ 12
- Device Type Manager ■ 1
 - installing ■ 51
- Diagnostics and Health database in RSMACC ■ 11
- Disaster Recovery
 - activation ■ 24
 - installing agent ■ 54
- Disaster Recovery agent
 - upgrading ■ 54
- DTM ■ 1
 - installing ■ 51
- DTM Catalog
 - updating ■ 51

E

- error messages
 - “At least one service or driver failed during system startup” ■ 77
 - “Cannot initialize application eventing subsystem” ■ 76
 - “Error executing ProCalV5 commands, check ProCalV5 installation” ■ 78
 - “Error initializing FactoryTalk AssetCentre. Could not load file or assembly” ■ 77, 79
 - “Error initializing FactoryTalk AssetCentre” ■ 76
 - “Error reading Primary Server Name from FactoryTalk Directory” ■ 75
 - “No ProCalV5 Server connection information exists on the FactoryTalk AssetCentre server” ■ 78
 - “The client and server versions are incompatible” ■ 76
- target machine actively refused the connection ■ 76

- Event database in RSMACC ■ 11

F

- FactoryTalk Activation
 - client, installing ■ 27
 - server, installing ■ 25
 - upgrading ■ 2, 25
- FactoryTalk Activation client
 - installing ■ 27
- FactoryTalk Activation Wizard ■ 27
- FactoryTalk Administration Console ■ 31, 45, 57
 - using ■ 67
- FactoryTalk AssetCentre
 - activating ■ 25, 26, 27
 - upgrading ■ 1
- FactoryTalk AssetCentre agents ■ 4
 - installing ■ 53
 - not starting ■ 78
 - requirements ■ 6
 - upgrading ■ 54
- FactoryTalk AssetCentre clients ■ 4
 - error starting ■ 76
 - installing ■ 42
 - requirements ■ 6
 - running ■ 50, 64
 - upgrading ■ 42
- FactoryTalk AssetCentre server ■ 3
 - error starting ■ 76
 - installing ■ 17, 29
 - requirements ■ 5
 - upgrading ■ 29
- FactoryTalk Directory
 - access via ■ 67
 - adding computers ■ 68
 - adding users ■ 67
- FactoryTalk Security
 - RSLogix and ■ 62
- FactoryTalk Services Platform
 - installing on agent computers ■ 56
 - installing on clients ■ 45
 - installing on server ■ 31
 - upgrading ■ 2
- feature security ■ 69
- File and Printer Sharing setting ■ 17

- firewall
 - configuring for ■ 7, 85
 - IIS and ■ 17
 - TCP/IP ports ■ 8, 85
- H**
- hardware requirements ■ 5
 - agent computer ■ 6
 - clients ■ 6
 - server ■ 5
- I**
- IIS
 - check if running ■ 75
 - firewall and ■ 17
 - installing ■ 19
- installing
 - .NET ■ 30, 44, 56
 - agents ■ 53
 - Calibration Management client ■ 46
 - Calibration Management server ■ 29, 36, 50
 - DTM ■ 51
 - FactoryTalk Activation client ■ 27
 - FactoryTalk Activation server ■ 25
 - FactoryTalk AssetCentre agents ■ 53
 - FactoryTalk AssetCentre clients ■ 42
 - FactoryTalk AssetCentre server ■ 17, 29
 - FactoryTalk Services Platform
 - on agent computers ■ 56
 - on clients ■ 45
 - on server ■ 31
 - IIS ■ 19
 - Internet Information Services ■ 19
 - ProCalV5 client ■ 41, 50
 - ProCalV5 server ■ 28, 38
 - process ■ 8
 - Process Device Configuration client ■ 47
 - Process Device Configuration server ■ 37
 - RSLinx Classic ■ 47, 58
 - RSLinx Enterprise ■ 48, 60
 - RSLogix 5000 Compare tool ■ 59
 - SQL Server 2000 ■ 81
 - SQL Server 2000 Service Pack ■ 83
 - SQL Server 2005 ■ 20
 - SQL Server 2005 Service Pack ■ 23
- Internet Information Services
 - installing ■ 19
- M**
- migrating
 - from RSMACC ■ 11
 - from RSMACC Change Management ■ 12
 - RSMACC databases ■ 11, 13
- N**
- network requirements ■ 7
- P**
- ports
 - needed for FactoryTalk AssetCentre ■ 7
 - needed for Rockwell Automation products ■ 85
 - TCP/IP ■ 8, 85
- ProCalV5 client
 - installing ■ 41, 50
- ProCalV5 Connection Installer ■ 29, 36, 50
- ProCalV5 Data Source Configuration ■ 38
- ProCalV5 Data Source Edit Wizard
 - running ■ 38
 - unable to run ■ 79
- ProCalV5 server
 - connecting ■ 38
 - installing ■ 28, 38
- Process Device Configuration capability ■ 1
 - activation ■ 24
 - installing client ■ 47
 - installing server ■ 37
- Process Device Configuration client, installing ■ 47
- Process Device Configuration server, installing ■ 37
- R**
- RAID-5 ■ 6
- RSLinx Classic
 - installing ■ 47, 58
 - upgrading ■ 2
- RSLinx Enterprise
 - installing ■ 48, 60
 - upgrading ■ 2

- RSLogix
 - agents and ■ 54
 - security and ■ 62
 - where to install ■ 41, 53
- RSLogix 500
 - upgrading ■ 2
- RSLogix 5000 Compare tool
 - installing ■ 59
- RSMACC
 - Archive database ■ 11
 - Archive module ■ 12
 - Audit database ■ 11
 - Change Management ■ 11
 - clients, uninstalling ■ 12
 - converting from ■ 11
 - databases, purging old data ■ 12
 - Diagnostics and Health database ■ 11
 - Enterprise Online Condition Monitor ■ 11
 - EOL ■ 11
 - Event database ■ 11
 - migrating databases ■ 11, 13
 - migrating from ■ 11
 - Network Health ■ 11
- RSSecurity Server
 - emulator ■ 13
 - uninstalling ■ 13
- running
 - FactoryTalk AssetCentre client ■ 50, 64

S

- sa account password ■ 82
- security
 - adding users ■ 67
 - configuring ■ 69
 - policies ■ 70
 - RSLogix and ■ 62
- server ■ 3
 - installing ■ 17, 29
 - system requirements ■ 5
- Server Settings ■ 69
- software requirements ■ 5
 - agent computer ■ 6
 - clients ■ 6
 - server ■ 5

- SQL Server 2000
 - collation ■ 81
 - installing ■ 81
 - Service Pack ■ 83
 - sa account password ■ 82
- SQL Server 2005
 - collation ■ 21
 - installing ■ 20
 - Service Pack ■ 23
 - minimum SQL permissions ■ 24
- starting
 - FactoryTalk AssetCentre agent ■ 78
 - FactoryTalk AssetCentre client ■ 50, 64, 76
- system requirements ■ 5
 - agent computer ■ 6
 - clients ■ 6
 - server ■ 5

T

- TCP/IP ■ 7
- troubleshooting ■ 73

U

- updating message when starting client ■ 50
- upgrading
 - from RSMACC Change Management ■ 12
 - from v. 2.00 (CPR 7) to 2.31 (CPR 9 SR 1)
 - 15
 - from v. 2.21 (CPR 9) to 2.31 (CPR 9 SR 1)
 - 1, 2
- users
 - adding to FactoryTalk Directory ■ 67

V

- virtual private network ■ 88
- VPN ■ 88

W

- Windows Firewall
 - configuration ■ 37, 49, 61
 - IIS and ■ 17
- Windows Firewall Configuration Utility ■ 37, 49, 61



Windows Vista
for FactoryTalk AssetCentre clients ■ 7

Limited User Account ■ 3

